


SM(G)540, 641, 505, 404 Series Installation Instruction

Installation Steps:

- Drill a 3/4" (19.1mm) diameter hole through the mounting surface (1.0 sq-ft minimum ground plane recommended for better antenna gain, but not required).
- Feed the Cable(s) and base bolt through the hole.
- Tighten nut to 5lb./ft/ (6.8Nm).
- NOTE: DO NOT overtighten
- NOTE: If the underside of the base bolt is exposed, sealing is required.
- OPTIONAL: If additional sealing is required, a bead of silicone can be applied to the gasket.
- ATTENTION: Always wear safety glasses and follow the proper safety practices when installing this antenna.

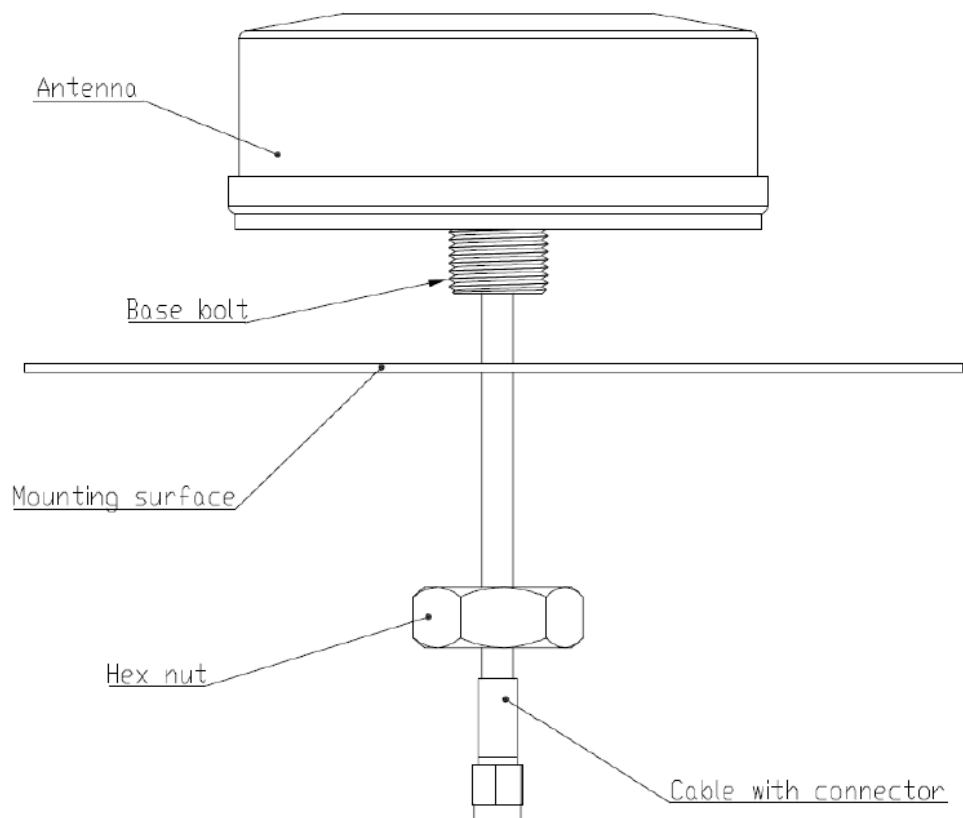

[Terms and Conditions](#)



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-111-9-001-1024 DR: GK APP: TC REV. A